

Products Catalogue of Generator Parts



Copyright © 2024 JWB Group All rights reserved

CONTENTS





Governor Arm Assembly JW-GE-GA168/188

01







Piston Connecting Crank JW-GE-PS168/188



JW-GE-PS168/188 Piston Connecting Crank (Piston)



JW-GE-PS168/188 Piston Connecting Crank (Connecting Rod)



An set of piston, crank, connecting rod and other parts, the combustion of the fuel will cause the set to work continuously, to keep the engine running

03 Cylinder Head JW-GE-CY168/188





JW-GE-CY168/188 Cylinder Head

An assembly of aluminum alloy parts, to form the cylinder room for the engine



04 Air Filter JW-GE-AF168/188



JW-GE-AF168/188 Air Filter

An assembly of plastic and foam parts, to filter the air that sucks into the engine

05 Crankcase Cover JW-GE-CC2KW/5KW





JW-GE-CC2KW/5KW Crankcase Cover



 Speed regulating shaft washer 2.Speed regulating wheel 3.Oil level gauge 4.Bolt M6X12 5.Bolt M6X12 6. Locating sheet 7.Oil cover 8.ring Sedl 9. Grankcase cover

An aluminum alloy cover for the crankcase



Frame Rear JW-GE-FR2KW/5KW



An aluminum alloy frame to keep the alternator

07 Muffler JW-GE-MF2KW/5KW






An assembly of steel parts to reduce the noise of the engine



08 Fuel Tank JW-GE-FT2KW/5KW

JW-GE-FT2KW/5KW Fuel Tank




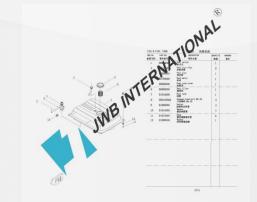

An steel tank to holds the fuel for the engine or generator

Panel Assembly JW-GE-PA2KW/5KW



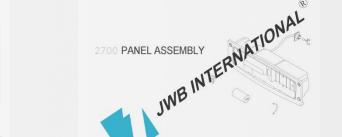



09

JW-GE-PA5KW Panel Assembly

An plastic control panel with all the input and output devices and switches for users to operate



Alternator Assembly JW-GE-AT2KW/5KW



Rotor and Stator

I 1FrameJW-GE-FM2KW/5KW





A steel frame to hold all the parts for the generator and convenient for users to carry



12

Recoil Starter JW-GE-RS168/188



JW-GE-RS168/188 Recoil Starter

An assembly of steel and plastic parts for users to pull and initiate the engine



Thank you very much for your attention!

Copyright © 2024 JWB Group All rights reserved